

*GENERAL_
HOISTWAY_ THE HOISTWAY MUST B
CODE FOR ELEVATORS (ASME A17.1 OR
STATE/PROVINCIAL AND LOCAL CODES. \overline{AY} THE HOISTWAY MUST BE IN ACCORDANCE WITH SAFETY ELEVATORS (ASME A17.1 OR B44-2000) AND ALL

PLUMB HDISTWAY- DUE TO CLOSE RUNNING CLEARANCES OWNER/AGENT MUST ENSURE THAT HDISTWAY AND PIT (WHERE PROVIDED) ARE LEVEL, PLUMB AND SQUARE AND ARE IN ACCORDANCE WITH THE DIMENSIONS ON THESE DRAWINGS.

<u>OVERHEAD CLEARANCE</u> OWNER/AGENT MUST ENSURE MINIMUM NO CLEARANCE IS IN COMPLIANCE WITH CODES.

CONSTRUCTION SITE- OWNER/AGENT TO PROVIDE ALL MASONRY, CARPENTRY AND DRYWALL WORK AS REQUIRED AND SHALL PATCH AND MAKE GOOD (INCLUDING FINISH PAINTING) ALL AREAS WHERE WALLS/FLOORS MAY REQUIRE TO BE CUT, DRILLED OR ALTERED IN ANY WAY TO PERMIT THE PROPER INSTALLATION OF THE LIFT.

<u>DIMENSIONS</u> CONTRACTOR/CUSTOMER TO VERIFY ALL DIMENSIONS AND REPORT ANY DISCREPANCIES TO OUR OFFICE IMMEDIATELY.

FLOOR/SUPPORT WALL LOADS— STRUCTURAL ENGINEER TO ASSURE THAT BUILDING AND SHAFT WILL SAFELY SUPPORT ALL LOADS IMPOSED BY THE LIFT EQUIPMENT. REFER TO THE TABLES ON THIS DRAWING FOR LOADS IMPOSED BY THE EQUIPMENT.

WITABLE LINTELS MUST BE PROVIDED BY OWNER/AGENT. WES ARE NOT DESIGNED TO SUPPORT OVERHEAD WALL

*MACHINE ROOM

LOCATION / ACCESS- MACHINE ROOM LOCATED AT THE LOWEST LEVEL ADJACENT TO HOISTWAY, UNLESS SHOWN OTHERWISE ON THE LAYOUT DRAWINGS. FIELD ADJUSTMENT BY INSTALLER MAY BE NECESSARY TO MEET JOB SITE CONDITIONS OR REGULATIONS. ACCESS TO MACHINE ROOM TO BE THROUGH A SELF CLOSING AND SELF

FOR DIL & ELECTRIC LINES— PROVIDED BY OTHERS, FROM ROOM TO HOISTWAY, (POSITION PER INSTALLERS

	15	15	115/1PH	_IGHTS
21	40	60	230/1PH/60HTZ	
15.6	30	30	INFO 208/3PH/60HTZ	₹ INFO
CURRENT (AMPS)	SIZE (AMPS) FUSE (AMPS)	SIZE (AMPS)	(V/PH/CYCLE)	
FULL LOAD	TIME DELAY FULL LOAD	DISCONNECT	INPUT VOLTAGE	

POWER SUPPLY- (SEE SPECIFICATIONS) LOCKABLE FUSED DISCONNECT WITH AUXILIARY CONTACT TO BRAKE THE BATTERY FEED, OR CIRCUIT BREAKERS WITH A 3-POLE BREAKER FOR BATTERY FEED REQUIRED, IN COMPLIANCE WITH ELECTRICAL CODE, AS FOLLOWS:

_OWNER/AGENT TO ENSURE AT LEAST 5 FTC OR 54 LUX .IGHTING OVER ELEVATOR AREA.

POWER- BEFORE INSTALLATION CAN BEGIN, PERMANENT

FASCIA PANEL BELOW UPPER LEVEL ENTRANCE— WHERE REQUIRED, FASCIA PANEL MUST BE FASTENED TO A SOLID WALL AND BE PERPENDICULAR TO THE FLOOR AND WALLS. HOISTWAY FASCIA IS NOT SELF-SUPPORTING FOR LONG, CONTINUOUS RUNS VOID OF ENTRANCES, ADEQUATE SUPPORT AND THE FASCIA MUST BE PROVIDED BY OTHERS.

<u>ASSEMBLIES</u> ENTRANCE ASSEMBLIES MUST BE ADJUSTED WITH PLATFORM AND INTERLOCK EQUIPMENT. OTHERS TO

RETURN WALLS- RETURN WALLS AT ENTRANCES MUST BE BUILT-IN BY DITHERS AFTER ENTRANCE ASSEMBLIES ARE IN PLACE. ENTRANCE ASSEMBLY MUST BE SECURELY FASTENED TO WALLS BY ELEVATOR

REV-000

RION MODEL 4854