

BY OTHERS

*GENERAL HOISTWAY MUST BE IN ACCORDANCE WITH SAFETY CODE FOR ELEVATORS (ASME A17.1 OR B44-2000) AND ALL STATE/PROVINCIAL AND LOCAL CODES.

PLUMB HDISTWAY- DUE TO CLOSE RUNNING CLEARANCES OWNER/AGENT MUST ENSURE THAT HOISTWAY AND PIT (WHERE PROVIDED) ARE LEVEL, PLUMB AND SQUARE AND ARE IN ACCORDANCE WITH THE DIMENSIONS ON THESE DRAWINGS.

CONSTRUCTION SITE- OWNER/AGENT TO PROVIDE ALL MASONRY, CARPENTRY AND DRYWALL WORK AS REQUIRED AND SHALL PATCH AND MAKE GOOD (INCLUDING FINISH PAINTING) ALL AREAS WHERE WALLS/FLOORS MAY REQUIRE TO BE CUT, DRILLED OR ALTERED IN ANY WAY TO PERMIT THE PROPER INSTALLATION OF THE LIFT. MINIMUM OVERHEAD CLEARANCE- OWNER/AGENT MUST ENSURE MINIMUM OVERHEAD CLEARANCE IS IN COMPLIANCE WITH CODES.

<u>DIMENSIONS</u> CONTRACTOR/CUSTOMER TO VERIFY ALL DIMENSIONS AND REPORT ANY DISCREPANCIES TO OUR OFFICE IMMEDIATELY.

TURAL

ELODR/SUPPORT WALL LOADS— STRUCTURAL ENGINEER TO ASSURE THAT BUILDING AND SHAFT WILL SAFELY SUPPORT ALL LOADS IMPOSED BY THE LIFT EQUIPMENT. REFER TO THE TABLES ON THIS DRAWING FOR LOADS IMPOSED BY THE EQUIPMENT.

IMPOSED BY THE LOADS IMPOSED BY THE LOADS.

NOTE: The loads imposed by the Loads imposed by the Loads imposed by the Loads.

NOTE: The loads imposed by the Loads imposed in Support overhead wall the Loads.

LOCATION / ACCESS- MACHINE ROOM LOCATED AT THE LOWEST LEVEL ADJACENT TO HOISTWAY, UNLESS SHOWN OTHERWISE ON THE LAYOUT DRAWINGS. FIELD ADJUSTMENT BY INSTALLER MAY BE NECESSARY TO MEET JOB SITE CONDITIONS OR REGULATIONS. ACCESS TO MACHINE ROOM TO BE THROUGH A SELF CLOSING AND SELF LOCKING DOOR.

_FOR_DIL & ELECTRIC LINES- PROVIDED BY OTHERS, FROM ROOM TO HOISTWAY. (POSITION PER INSTALLERS 'IONS).

	15	15	115/1PH	AB LIGHTS
21	40	60	230/1PH/60HTZ	
15.6	30	30	JTDR INFO 208/3PH/60HTZ	JTOR INFO
SIZE (AMPS) FUSE (AMPS) CURRENT (AMPS)	FUSE (AMPS)	SIZE (AMPS)	(V/PH/CYCLE)	
FULL LOAD	TIME DELAY FULL LOAD	DISCONNECT	INPUT VOLTAGE	

*ELECTRICAL

POWER SUPPLY— (SEE SPECIFICATIONS) LOCKABLE FUSED DISCONNECT WITH AUXILIARY CONTACT TO BRAKE THE BATTERY FEED, OR CIRCUIT BREAKERS WITH A 3-POLE BREAKER FOR BATTERY FEED REQUIRED, IN COMPLIANCE WITH ELECTRICAL CODE, AS FOLLOWS:

MUST BE SUPPLIED. POWER- BEFORE INSTALLATION CAN BEGIN, PERMANENT

*ENTRANCES

FASCIA PANEL BELOW UPPER LEVEL ENTRANCE- WHERE REQUIRED, FASCIA PANEL MUST BE FASTENED TO A SOLID WALL AND BE PERPENDICULAR TO THE FLOOR AND WALLS. HOISTWAY FASCIA IS NOT SELF-SUPPORTING FOR LONG, CONTINUOUS RUNS VOID OF ENTRANCES. ADEQUATE SUPPORT AND THE FASCIA MUST BE PROVIDED BY OTHERS.

ASSEMBLIES- ENTRANCE ASSEMBLIES MUST BE ADJUSTED WITH PLATFORM AND INTERLOCK EQUIPMENT. OTHERS TO ADEQUATE ROUGH OPENING.

REV-000

RION17 MODEL 4260W