

*GENERAL_ HOISTWAY MUST BE IN ACCORDANCE WITH SAFETY CODE FOR ELEVATORS (ASME A17.1 OR B44-2000) AND ALL STATE/PROVINCIAL AND LOCAL CODES.

PLUMB HOISTWAY— DUE TO CLOSE RUNNING CLEARANCES OWNER/AGENT MUST ENSURE THAT HOISTWAY AND PIT (WHERE PROVIDED) ARE LEVEL, PLUMB AND SQUARE AND ARE IN ACCORDANCE WITH THE DIMENSIONS ON THESE DRAWINGS.

VERHEAD CLEARANCE- DWNER/AGENT MUST ENSURE MINIMUM CLEARANCE IS IN COMPLIANCE WITH CODES.

CONSTRUCTION SITE- OWNER/AGENT TO PROVIDE ALL MASONRY,
CARPENTRY AND DRYWALL WORK AS REQUIRED AND SHALL PATCH AND
MAKE GOOD (INCLUDING FINISH PAINTING) ALL AREAS WHERE
WALLS/FLOORS MAY REQUIRE TO BE CUT, DRILLED OR ALTERED IN
ANY WAY TO PERMIT THE PROPER INSTALLATION OF THE LIFT.

*STRUCTURAL

FLOOR/SUPPORT WALL LOADS— STRUCTURAL ENGINEER TO ASSURE THAT BUILDING AND SHAFT WILL SAFELY SUPPORT ALL LOADS IMPOSED BY THE LIFT EQUIPMENT. REFER TO THE TABLES ON THIS DRAWING FOR LOADS IMPOSED BY THE EQUIPMENT.

<u>DOORS-</u> SUITABLE LINTELS MUST BE PROVIDED BY OWNER/AGENT.
DOOR FRAMES ARE NOT DESIGNED TO SUPPORT OVERHEAD WALL

*MACHINE ROOM

LOCATION / ACCESS-_ MACHINE ROOM LOCATED AT THE LOWEST LEVEL ADJACENT TO HOISTWAY, UNLESS SHOWN OTHERWISE ON THE LAYOUT DRAWINGS. FIELD ADJUSTMENT BY INSTALLER MAY BE NECESSARY TO MEET JOB SITE CONDITIONS OR REGULATIONS. ACCESS TO MACHINE ROOM TO BE THROUGH A SELF CLOSING AND SELF DOOR.

.(SNDI FOR OIL & ELECTRIC LINES— PROVIDED BY DTHERS, FROM

LIGHTS		75	
SIF		Ē	
115/1PH	230/1PH/60HTZ	OR INFO 208/3PH/60HTZ	INPUT VOLTAGE (V/PH/CYCLE)
15	60	30	DISCONNECT SIZE (AMPS)
			TIME
15	40	30	DELAY (AMPS)
	21	15,6	DISCONNECT TIME DELAY FULL LOAD SIZE (AMPS) FUSE (AMPS) CURRENT (AMPS)

*ELECTRICAL

POWER SUPPLY— (SEE SPECIFICATIONS) LOCKABLE FUSED DISCONNECT WITH AUXILIARY CONTACT TO BRAKE THE BATTERY FEED, OR CIRCUIT BREAKERS WITH A 3-POLE BREAKER FOR BATTERY FEED REQUIRED, IN COMPLIANCE WITH ELECTRICAL CODE, AS FOLLOWS:

POWER MUST BE SUPPLIED. T POWER- BEFORE INSTALLATION CAN BEGIN, PERMANENT

<u>i.</u> DWNER/AGENT TO ENSURE AT LEAST 5 FTC OR 54 LUX LIGHTING OVER ELEVATOR AREA.

*ENTRANCES

FASCIA PANEL BELOW UPPER LEVEL ENTRANCE— WHERE REQUIRED,
FASCIA PANEL MUST BE FASTENED TO A SOLID WALL AND BE
PERPENDICULAR TO THE FLOOR AND WALLS. HOISTWAY
FASCIA IS NOT SELF-SUPPORTING FOR LONG, CONTINUOUS
RUNS VOID OF ENTRANCES. ADEQUATE SUPPORT AND THE
FASCIA MUST BE PROVIDED BY OTHERS.

RETURN WALLS- RETURN WALLS AT ENTRANCES MUST BE BUILT-IN BY OTHERS AFTER ENTRANCE ASSEMBLIES ARE IN PLACE. ENTRANCE ASSEMBLY MUST BE SECURELY FASTENED TO WALLS BY ELEVATOR ADEQUATE ROUGH OPENING. <u>ASSEMBLIES-</u> ENTRANCE ASSEMBLIES MUST BE ADJUSTED WITH PLATFORM AND INTERLOCK EQUIPMENT. OTHERS TO

REV-000

딮.

RION17 MODEL 4854W